










JAPAN assembly

# JAPAN CORNER



 30mn	 
7x 	1x 
21x 	4  1x

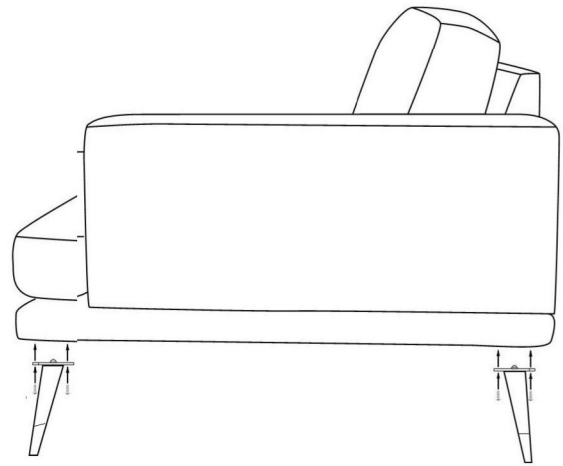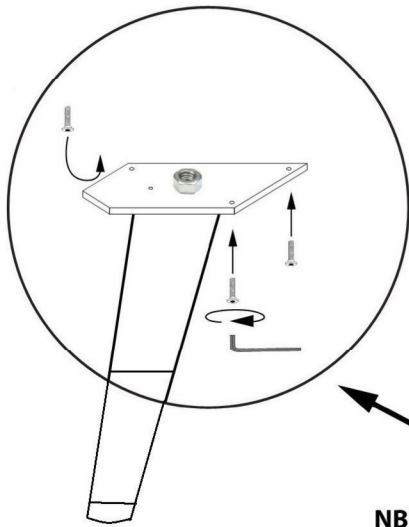

**NB!** First turn all 3 screws half way by hand and then continue with the Allen key.

